

# PROWOOD

garden furniture

## Montážní(y) návod 10.

Assembly instructions 10.


Montageanleitung 10.

Istruzione per il montaggio 10.


Usine d'assemblage 10.

Manual de montaje 10.


Руководство монтажа 10.

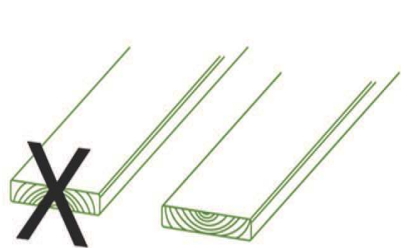

1.

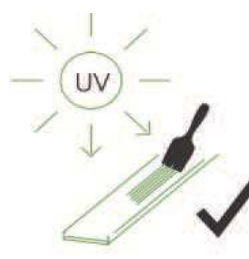


OWATROL PCD 91

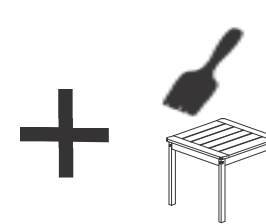


OWATROL AQUADECKS


2.

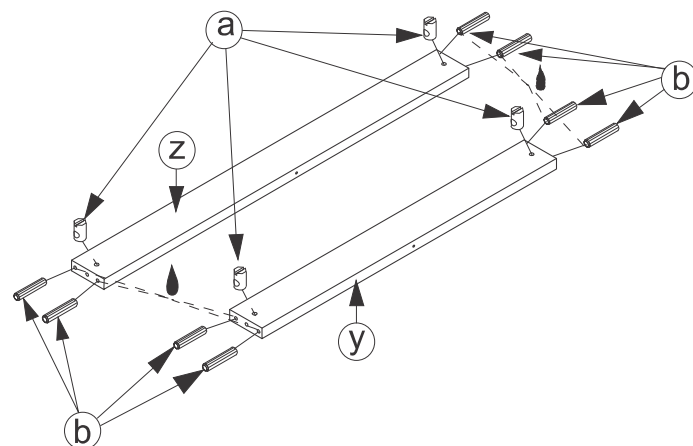


3.

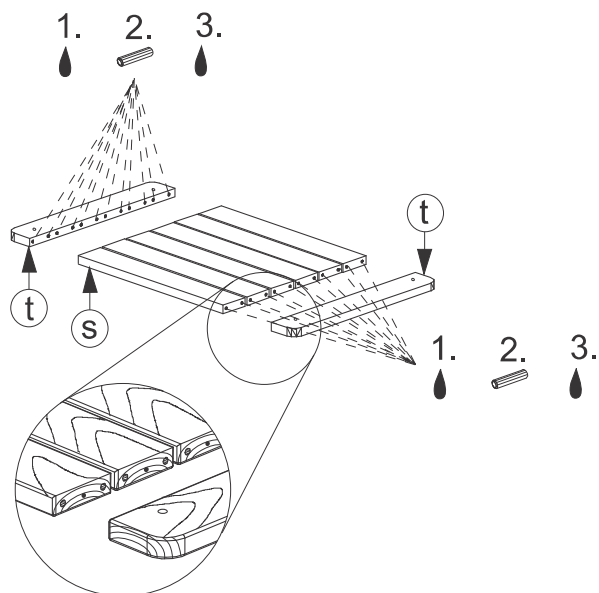


1/2

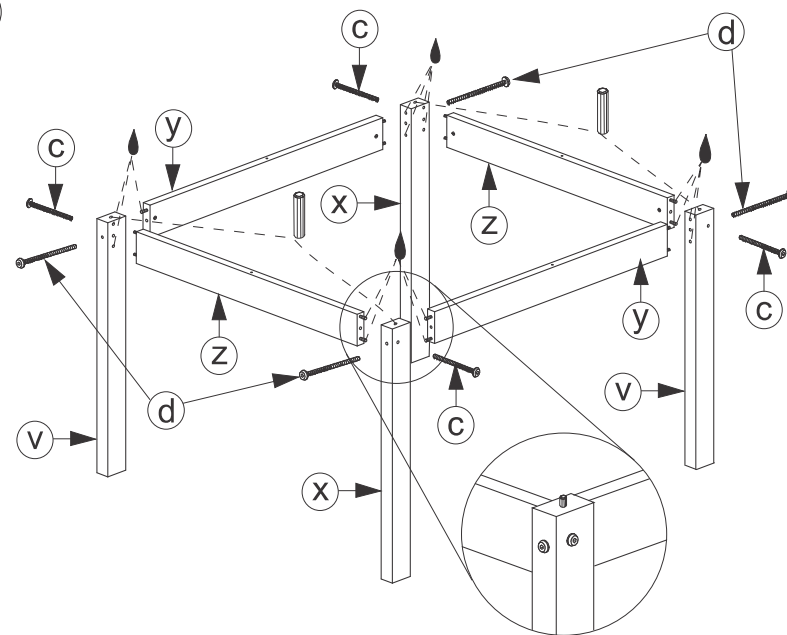







4.

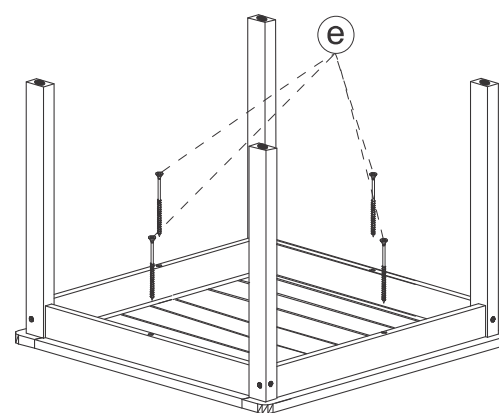

5.

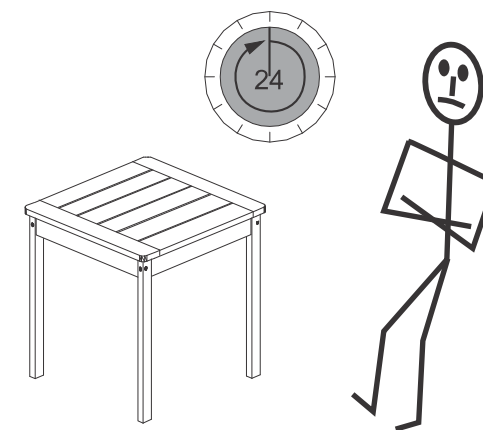

s		26x92x416	8x
t		26x92x800	2x
v		42x68x729	2x
x		42x68x729	2x
y		26x92x401	2x
z		26x92x656	2x

